



- 1 put transmission in park
 - 2 install sensor magnet on selector lever
 - 3 install sensor bracket on transmission pan directly below lever
 - 4 adjust magnet/sensor to have 1/8 air gap between components
- NOTE: mounting bracket may need to be modified for certain applications

SECURE-IDLE	
Chassis Make	ALL
Year	ALL
Title	P/N SENSOR
Size	DWG NO: 01-0021
A	